

DMX Values

5 Ch

| Channel | Function | Value | Percent/Setting |
|---------|--------------|-----------|----------------------|
| 1 | Dimmer | 000 ∘ 255 | 0–100% |
| 2 | Fine Dimmer | 000 ∘ 255 | 0–100% |
| 3 | Red Shift | 000 | On |
| | | 001 ∘ 255 | Off |
| 4 | Strobe | 000 ∘ 010 | No function |
| | | 011 ∘ 255 | Strobe, slow to fast |
| 5 | Auto Program | 000 ∘ 010 | No function |
| | | 011 ∘ 080 | Auto 1, slow to fast |
| | | 081 ∘ 160 | Auto 2, slow to fast |
| | | 161 ∘ 240 | Auto 3, slow to fast |
| | | 241 ∘ 255 | No function |

4 Ch

| Channel | Function | Value | Percent/Setting |
|---------|--------------|-----------|----------------------|
| 1 | Dimmer | 000 ∘ 255 | 0–100% |
| 2 | Red Shift | 000 | On |
| | | 001 ∘ 255 | Off |
| 3 | Strobe | 000 ∘ 010 | No function |
| | | 011 ∘ 255 | Strobe, slow to fast |
| 4 | Auto Program | 000 ∘ 010 | No function |
| | | 011 ∘ 080 | Auto 1, slow to fast |
| | | 081 ∘ 160 | Auto 2, slow to fast |
| | | 161 ∘ 240 | Auto 3, slow to fast |
| | | 241 ∘ 255 | No function |

3 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-------------|-----------|-----------------|
| 1 | Dimmer | 000 ∘ 255 | 0–100% |
| 2 | Fine Dimmer | 000 ∘ 255 | 0–100% |
| 3 | Red Shift | 000 | On |
| | | 001 ∘ 255 | Off |

2 Ch

| Channel | Function | Value | Percent/Setting |
|---------|-----------|-----------|-----------------|
| 1 | Dimmer | 000 ∘ 255 | 0–100% |
| 2 | Red Shift | 000 | On |
| | | 001 ∘ 255 | Off |