DTT-IP – Quick Set Up Guide

Troubleshooting

Please visit the online support pages accessible from https://provision.zendesk.com for further assistance on using the DTT-IP server.

Safety Points

☐ Please read these instructions fully.
☐ Do not operate near water or where there is a risk of spilling any liquids into the units.
☐ Remove the units from the power supply or wall plug before cleaning.
☐ Clean with a dry cloth.
☐ Do not place near any heat source. (e.g. Radiators, Stoves or any other equipment producing heat)
☐ Do not block ventilation holes and operate in the recommended orientation.
☐ Do not insert any objects into ventilation holes that might touch circuit voltage points or areas that might cause electrical shock.
☐ Only use the AC power adaptors supplied. Use of other power supplies may cause malfunction or permanent damage.
☐ Do not use an AC power supply if there are any signs of damage to case or wiring.
☐ Do not handle the units or power adaptors with wet hands.
☐ Disconnect the AC power adaptor from the mains when not in use.

Useful Links

Company Websites

www.globalinvacom.com

www.provision-comm.com

This symbol indicates that when the end user wishes to discard this product, it must be sent to separate collection facilities for recovery and recycling. By separating this product from other household waste, the volume of waste sent to incinerators and landfill will be reduced and natural resources will be conserved. If uncertain please contact your local authority for advice.

Packaging materials are principally recyclable and wherever possible should be recycled. Materials such as plastic bags should be kept away from children.

Package Contents

Before proceeding please ensure the following items are in the DTT-IP sever packaging.
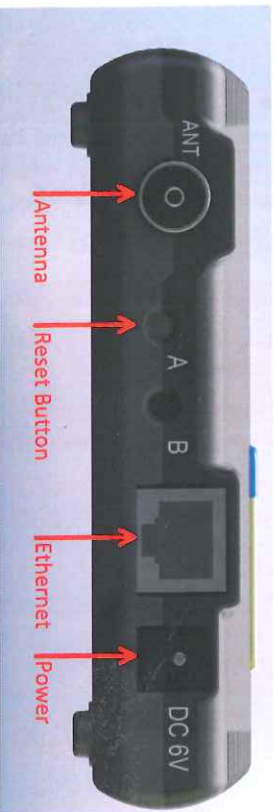
1. DTT-IP server
2. Wall Plug Mains Power Adaptor
3. Ethernet cable
4. Coax TV aerial cable
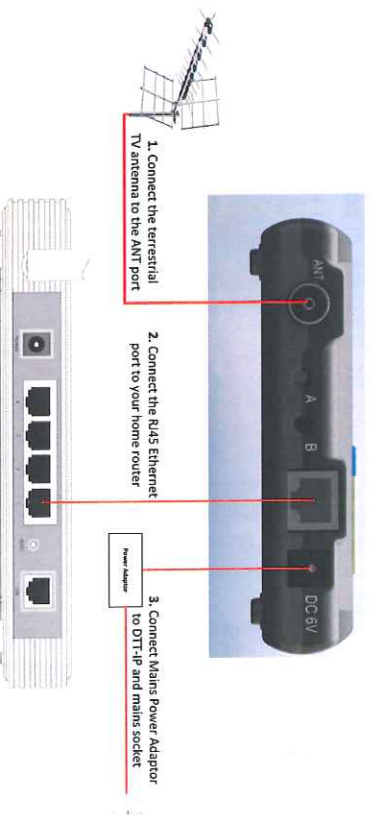5. Quick Start guide

DTT-IP server block diagrams

Front View

On / Off button
Power status LED
Client status LED

Rear View

Antenna
Reset Button
Ethernet
Power
ANT
A
B
DC 6V

DTT-IP Setup Diagram

1. Connect the terrestrial TV antenna to the ANT port
2. Connect the RJ45 Ethernet port to your home router
3. Connect Mains Power Adaptor to DTT-IP and mains socket

DTT-IP client application

The recommend client application is the Elgato Sat>IP client which is supported on both Android and iOS.

Client App setup

1. Download and install the application for your platform iOS:

http://itunes.com/apps/elgatosatip

Android:
https://play.google.com/store/apps/details?id=com.elgato.eyetv.satip

2. Make sure your iOS or Android device are connected to the same network as the DTT-IP unit
3. Launch the Elgato Sat>IP client application
4. Select the DTT-IP server under the Settings -> Device heading
5. If this is the first time the client Application detects the DTT-IP server a scan will be required. In Settings press Scan channels under the Channels heading and follow the in app instructions.
6. Once the scan is complete the list of TV channels will appear under the TV icon.
7. Press a TV channel to start watching.