


# Azimut-KAMUTII

Portable smart system with Multi-Channel Amplifiers

Thank you for choosing this K-array product!

To ensure proper operation, please carefully read this quick guide.

Download the owner's manual and safety instruction from the official K-array website at www.k-array.com:

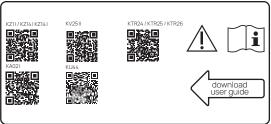

Before using the product please carefully read the owner's manual and safety instruction.

After reading this quick guide, be sure to keep it for future reference.


Should you have any questions about your new device please contact K-array customer service at support@k-array.com or contact the official K-array distributor in your country.

The Kommander-KA amplifier in the Azimut system is factory configured with the settings necessary to drive the Lyzard-KZ or Vyper-KV passive loudspeakers and Rumble or Truffle subwoofers, in order to fulfill maximum power of each output channel.

#### Software

The dedicated K-array Connect app allows to direct manage and control an amplifier with a mobile device (smartphone or tablet) wireless.



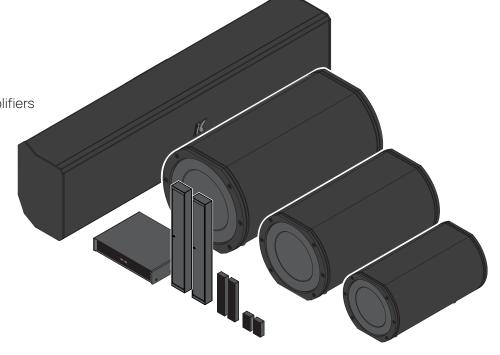


Carefully inspect the shipping carton, then examine and test your new device. If you find any damage, immediately notify the shipping company. Check that the following parts are supplied with the product:

- 1x This quick quide
- 1x Kommander-KA021 comprising:
  - 2x Euroblock 2,5/2-ST-5,08 speaker connectors
  - 1x Euroblock 2,5/4-ST-5,08 speaker connectors
  - 4x Euroblock 1,5/3-ST-3,81 input connectors
  - 1x Power supply with power cord
- 1x K-REMUCTRL remote
- 1x subwoofer cable with Euroblock connectors
- One of the following loudspeakers set according to the version:

Varaian	Loudspeakers set			
Version	Loudspeakers		Subfoofer	
Azimut-KAMUT2LII	Lyzard-KZ1I	2	Rumble-KU44-2	1
Azimut-KAMUT2L1II	Lyzard-KZ1I	2	Truffle-KTR24	1
Azimut-KAMUT2L14 II	Lyzard-KZ141	2	Truffle-KTR25	1
Azimut-KAMUT2V25II	Vyper-KV25 II	2	Truffle-KTR26	1

### K-REMUCTRL remote


Switch on the amplifier and the K-REMUCTLR remote. Please note that the remote dongle is already plugged into one of the USB ports of the amplifier.

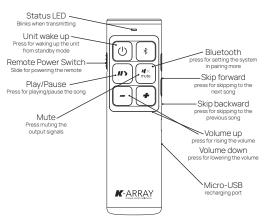

The K-REMUCTRL remote includes a high-efficiency rechargeable battery with a switch that can extend the batter life when powered off. When the battery discharges to approximately 10% remaining life, the Status LED on the remote begins flashing.

Designed and Made in Italy by K-ARRAY surl Via P. Romagnoli 17 I 50038 Scarperia e San Piero - Firenze - Italy ph +39 055 84 87 222 I info@k-array.com I www.k-array.com

# **Amplifier Rear Pannel**



- 1. 4x USB ports
- 2. RJ45 Ethernet port
- 3. 4 channels Euroblock 1,5/3-ST-3,81 balanced analog inputs
- 4. 3,5 mm jack unbalanced stereo analog input
- 5 Status LED
- 4 channels Euroblock output terminals: speaker connectors for either 2,5/2-ST-5,08 or 2,5/4-ST-5,08 flying plugs
- 7. Reset button
- 8. Optical S/P DIF stereo digital input
- 9. DC inlet
- 10. Power switch

## AC mains supply


- A. Connect the power adapter to the power cord;
- B. Connect the power plug to a mains socket outlet;
- C. Connect the power adapter to the DC inlet on the rear panel of the Kommander-KA02I amplifier unit.



Once properly plugged, switch on the amplifier pushing on the power button: when the unit is operating the front and back LEDs light on green.

## Input wiring


Audio signals can be fed to the system using the input connectors on the amplifier rear panel.

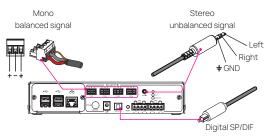




#### Loudspeakers Wiring

Plug the 2 poles connector heading the loudspeakers cable to the Suggested Loudspeaker placements. amplifier's output connectors 3 (LEFT CHANNEL) and 4 (RIGHT CHANNEL).

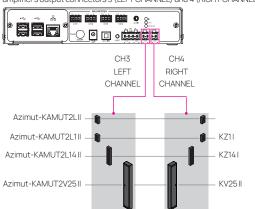


## Subwoofer Wiring

The cables for connecting the subwoofer to the amplifier is provided within the package. Plug the 4 poles connector heading the cable to the amplifier's output connectors 1 and 2.

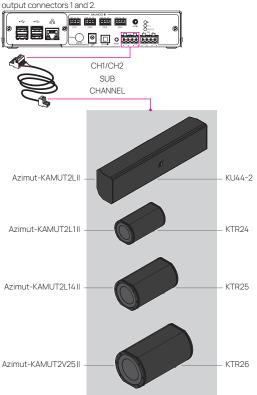

#### Installation

150 mm (6 in) 150 mm (6 in) Suggested minimum free space to leave for the Truffle-KTR subwoofer





min height 1,7 m (5.6 ft) max height 2,7 m (9 ft) min distance: 2,5 m (81/4 ft)

## Remote Connectivity

The Kommander-KA021 amplifier unit features a built-in hot spot establishing a local Wi-Fi network dedicated to remote control the amplifier with mobile devices.

The default local Wi-Fi SSID and unit IP address are printed on a label located on the bottom plate of the Kommander-KA021 unit; a QR code for ease the connectivity is printed as well.


The RJ45 Ethernet port on the rear panel allows to connect the Kommander-KA02I amplifier unit to a local area network (LAN). Since every host on a network must be identified by a unique IP address, the simplest local network usually implement a router/switch with DHCP server managing the addresses allocation: by default the Kommander-KA02 I unit is set to obtain a local IP address from the DHCP server.

A static IP address can be assigned to the amplifier unit using the amplifier's embedded web app (Network menu).

## Connectivity Reset

With the unit switched on, keep pressed the RESET button on the rear panel for 10 to 15 seconds in order to:

- · Revert the wired IP addressing to DHCP;
- Activate the built-in Wi-Fi and reset the wireless parameters to the default SSID name and password.



## Getting Started With K-array Connect

- 1. Power up the unit.
- 2. Hold your mobile device (smartphone or tablet): ensure the Wi-Fi connectivity is on.
- 3. Launch the K-array Connect app.
- 4. If the list of available devices is empty touch the SCAN QR CODE button and use the mobile device camera to frame the QR code printed on a label on the unit chassis: this provides the mobile device to connect to the amplifier's built in hot spot.
- 5. Click on the image of the unit to start managing the amplifier with the K-array Connect app or click on the button with the globe in order to access its embedded web app.



In case you need to connect manually connect to the amplifier's hot spot, the default password is the device serial number, e.g. K142AN0006 (case sensitive)







The K-array active unit Connected and has a label with the QR code for connecting the local Wi-Fi: target the code to establish the wireless



#### Status LED

С	olor	Mode	Description
	orange	solid	DSP software is loading
	green	solid	System ready
	blue	solid	User command: system identification
	purple	flashing	Network parameters reset

## Specifications

NITOR KA104

opcomoditions			
	KZ1I	KZ141	KV25II
Rated Power	3,5 W	15 W	75 W
Frequency response 1	500Hz 18 kHz	500Hz 18 kHz	150Hz 18 kHz
Max SPL <sup>2</sup>	86 dB	98 dB	108 dB
Impedance	16Ω	16Ω	8Ω/16Ω
Dimensions	22 x 37 x 11 mm (0.9 x 1.5 x 0.4 in)	22×100×11 mm (0.9×3.9×0.4 in)	
Weight	0.021 kg (0.046 lb)	0,059 kg (0.130 lb)	0,4 kg (0.88 lb)

	KTR24	KTR25	KTR26	KU44-2
Rated Power	60 W	80 W	100 W	100 W
Frequency response 1	45-500 Hz	45-500Hz	45-150Hz	45-500Hz
Max SPL <sup>2</sup>	112 dB	115 dB	120 dB	116 dB
Impedance	4Ω	4Ω	2Ω	2Ω
Dimensions		152×147×258mm (6.0×5.8×10.2in)		

	KA02I
Output channels	4
Output Power per ch @4 $\Omega^3$	50W
Dimensions	219 x 46 x 170 mm (8.6 x 1.8 x 6.7 in)
Weight	0,7 kg (1.5 lb)

1,5 kg (3.31 lb) 2,5 kg (5.51 lb) 3,5 kg (7.72 lb) 5.9 kg (13.0 lb)

1 With dedicated preset.

2 Maximum SPL is calculated using a signall with crest factor 4 (12dB) measured at 8 m then scaled at 1 m.

3 CTA-2006 (CEA-2006) Amplifier Power Standards, single channel driven.